IMPORTANT SAFETY INSTRUCTIONS

THIS APPLIANCE IS INTENDED FOR HOUSEHOLD USE. WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE TAKEN, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS
BEFORE USING
KEEP AWAY FROM WATER

DANGER – To reduce the risk of electrocution:

1. Always unplug this appliance immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. Do not reach for an appliance that has fallen into water. Unplug immediately.

WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons:

1. Read all instructions before using the appliance.
2. To protect against electrical hazards, do not use while bathing or in the shower.
3. Close supervision is necessary when any appliance is used by or near children or by individuals with certain disabilities.
4. Unplug the appliance from outlet when not in use and before cleaning. Do not leave appliance unattended when it is plugged in. Keep cord away from heated surfaces.
5. Do not operate this appliance with a damaged cord or plug or if the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to nearest service facility for examination, electrical or mechanical adjustment, or repair. No repairs should be attempted by the consumer.
6. Use appliance only for intended use as described in this instruction book. The use of attachments not recommended or sold by Conair may cause hazards.
7. Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
8. Do not use on a soft surface such as a bed, where openings may be blocked.
9. Do not place or store appliance where it can fall or be pulled into a tub or sink.
10. Do not place in or drop into water or other liquid.
11. If an appliance falls into water, unplug it immediately. Do not reach into the water. Use on any 120 volt 60 hertz AC electric outlet (ordinary household current). Do not use it on any other electrical outlet.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

1. Your Complete Nail Care Centre operates on an AC adapter. Adapter can be plugged into the housing to operate the nail dryer or to recharge the power handle; adapter can also be used to operate the power handle directly by plugging into the bottom of the handle.

length of the nail. Toe nails should be filed straight across to avoid ingrown toe nails. Use a fine Smoothing Disc/Plate on a low speed as a finishing touch to the edges.

3. To reduce calluses, rough, or hard skin, use the Sapphire Cones or a Smoothing Disc/Plate. The thickness or dead skin can be reduced by using the side of the Sapphire Cones. Where ridges and furrows are present, the Smoothing Disc can also be used to gently and carefully reduce the unevenness, using short intermittent strokes. This is not recommended more than once every eight weeks.
4. Finish your pedicure by using a moisturizing lotion or cream.

MAINTENANCE

Your nail care centre is designed for household use and is virtually maintenance-free. No lubrication is needed.

If cleaning becomes necessary, disconnect the appliance from the power source and wipe exterior with a cloth.

If any abnormal condition occurs, unplug the nail care centre, allow it to cool, and return it to an authorized service centre for repair.

CHARGING

The Conair Professional Nail Care System should be charged using only the charger supplied. Ensure that the switch on the handle is in the "off" position. Connect the appliance to the charger by inserting the small plug at the end of the charger lead into the corresponding socket in the end of the handle. Plug the charger into the main wall socket. Allow the handle to charge for 16 hours. To preserve the longest possible life of the rechargeable cells, it is better not to leave the appliance on charge for more than 24 consecutive hours.

CORDED USE

1) Ensure that the handle is switched off.
2) Insert the small plug at the end of the charger lead into the corresponding socket in the end of the handle. Plug the charger into the main wall socket. Wait for one minute, then switch on.

IMPORTANT! Do not use the appliance in this mode for more than 20 minutes.

GETTING TO KNOW YOUR COMPLETE NAIL CARE SYSTEM

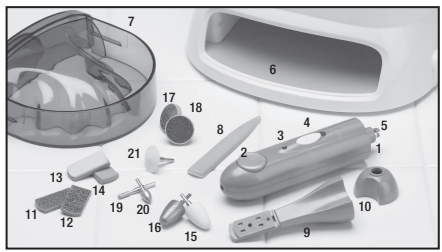

1. Rechargeable Power Handle works corded or cordless
2. Variable Speed Control
3. LED Indicator
4. On/Off Switch
5. Light
6. Nail Dryer
7. Manicurist's Dish
8. Cuticle Shaper
9. Linear Head
10. Rotary Head
11. Metal smoothing plate
12. Metal Shaping Plate
13. Buffing Plate
14. Smoothing Plate
15. Felt Cone
16. Large Sapphire Cone *
17. Smoothing Disc
18. Shaping Disc
19. Small Sapphire Cone *
20. Medium Sapphire Cone *
21. Buffing Disc

* for acrylic nails

2. The power handle has two interchangeable heads. The rotary head works with round attachments that spin in a circular motion and the linear head works with rectangular plates that move in a back-and-forth motion. The rotary head is already attached to the power handle. Pull power handle up to remove from the attachment tray.
3. To change heads: twist the head in a counter-clockwise motion and pull up; head comes off. Gently push other head onto plastic base and twist slightly with clockwise motion until head clicks into secure position.

4. To attach discs or plates: To attach discs or cones to the rotary head, insert metal post of disc into the white plastic tube of head and gently push down. To attach plates to the linear head, match up rounded end of plate with round end of head and snap plate onto head. To remove attach ments, simply pull off.

5. Your Complete Nail Care Centre contains a number of attachments. The coarser discs and plates are ideal for shaping and eliminating ragged edges for a clean finish. The finer discs, cones and plates smooth unsightly ridges. The polishing cone and disc provide the flawless smooth surface needed for nail polish applications and help polish nails to a healthy-looking luster.
6. To soften nails and cuticles before a manicure, pull out the manicurist's dish, fill it with warm soapy water and soak your finger tips for a few minutes. Dry your hands thoroughly before using the power handle and attachments.
7. After you have attached a head and an

appropriate attachment to the power handle, turn the power handle "on" and carefully start shaping, smoothing or polishing your nails. You can vary the speed at which the attachment moves by turning the speed dial. Slower speeds give you more control over the filing procedure.
8. Your power handle also features a light to give

you additional illumination when working on a nail.
9. Your Complete Nail Care Centre includes a nail dryer which will help shorten fresh nail polish drying time. Simply insert your hand into the nail dryer, pushing down slightly. That will start the nail dryer. Check nails after a few minutes to see if polish is dry.

WARNING: IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU'RE WRONG.

KEEP AWAY FROM WATER

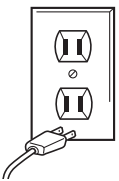

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off?

If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

A Public Service Ad from the Association of Home Appliance Manufacturers and Underwriters Laboratories, Inc.

STORAGE

Disconnect from electrical outlet. Place nail care centre in cool, dry area out of reach of children, where it will not be damaged. Handle cord carefully for longer life; do not jerk or strain at plug connections, or wrap cord around unit for storage. This could cause damage to the cord or a short circuit. To store unit, coil cord loosely.

LIMITED ONE YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below that is nearest you, together with your purchase receipt and $5.50 for postage and handling. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

SERVICE CENTRE:

Conair Consumer Products Inc.
100 Conair Parkway,
Woodbridge, Ontario. L4H 0L2
1-800-472-7606
Consumer Call Centre E-mail:
Consumer_Canada@Conair.com
www.conaircanada.ca

©2006 CONAIR CONSUMER PRODUCTS INC.

06CN1438

IB-7329

10. After using the Complete Nail Care Centre several times, you will find the attachment and speed combinations that give you the results you desire.

MANICURE

1. Soak your nails in warm soapy water, then dry thoroughly.
2. Decide on the nail shape you want. The three most common nail shapes are round, square, or square with rounded edges.
3. Use the Smoothing Disc/Plate to smooth the edges of each nail. Then use the rounded end of the Cuticle Shaper to gently push the cuticles away from the nail plate. If desired, massage lotion or cream into the cuticle to help soften cuticle and promote healthy nails. Unwanted rough or hard skin can be reduced by using the Sapphire Cones and/or a Smoothing Disc. The side of the pointed Sapphire Cone may be used to carefully remove areas of hard skin beside the nail, using care not to damage the nail wall. In cases where ridges and furrows are present, the Smoothing Disc/Plate can be used to gently and carefully reduce the unevenness, using short intermittent strokes. This is not recommended more than once every eight weeks.
4. To give nails a healthy natural look, use the Polishing Disc or Cone, maximum of 30 seconds per nail, taking care to avoid the cuticle.
5. Finish your manicure by using a moisturizing lotion or cream.

PEDICURE

1. Soak your feet for five minutes in warm, soapy water and dry thoroughly.
2. Use the Smoothing Disc/Plate to reduce the

CONAIR®

THE COMPLETE NAIL CARE CENTRE

INSTRUCTION & STYLING GUIDE

For your safety & continued enjoyment of this product, always read the instruction book carefully before using.

NC01RC MODELS

1/30/07 3:25:56 PM